



...Default Value  
 ...Value Indication

※Compatible lists (TX and RX)

Transmitter (TX)	·M12S
	·EXZES-ZZ
	·MT44
Reciever (RX)	·RX-472
	·RX-482
	·RX-47T

※Please use  
**「MULTI SETTING GEAR」**  
 if you did not have compatible device

NO.	Contents	Discription	TX AUX 2	Setting Value (Value Indication)											
1	SLL-CH	1:CH1 (Steering)	CODE 1	1											
2	STRETC	Stretcher adjustment	CODE 2	26	27	28	29	30	31	32	33				
3	BOOST	Boost Adjustment (Initial movement adjustment)	CODE 3	26	27	28	29	30	31	32	33				
4	D-BAND	Dead Band Adjustmengt	CODE 4	0	1	2	3								
5	MV-MID	Middle Torque Adjustment	CODE 5	43	44	45	46	47	48	49	50	51	52		
6	MV-END	End Torque Adjustment	CODE 6	27	28	29	30	31	32						
7	BRAKE	Brake adjustment (Out of corner or under adjustment)	CODE 7	4	5	6	7	8	9	10	11	12	13		
8	MV-HLD	Range of adjustment by MV- MID/MV-END setting adjustment	CODE 8	1	2	3									
9	MV-FRQ	Torque adjustment during initial and middle and middle to end fo cornering	CODE 9	75	76	77	78	79	80	81	82	83	84		
10	MAX-PW	Max Power adjustment	CODE 10	98	99	100									

ONLY "MULTI SETTING GEAR"