

PGS-LH Servo Transmitter(CODE10-compatible) Basic Setting

※Using PGS-LH, choose a favorite setting from basic setting ①-④

Then, adjust each value by yourself.

NO.	Menu	Content	Transmitter/CODE AUX	Basic Setting			
				①	②	③	④
				For EP Beginner	For EP Touring	For EP Buggy	For GP
			AUX2	Less Torque	SRG-BLS EVO	SRG-BLS EVO (More Torque type)	Max Torque
1	SLL-CH	※Set SSL-CH for Servo setting Connected servo without Setting channel, servo will work as default setting 1 : CH1 2 : CH2 3 : CH3	CODE 1	1 : CH1 (Steering)	1 : CH2 (Steering)	1 : CH3 (Steering)	1 : CH4 (Steering)
2	STRETC	Stretcher Adjustment	CODE 2	78	88	93	96
3	BOOST	Deadband Adjustment	CODE 3	78	92	95	96
4	D-BAND	torque adjustment in end-range	CODE 4	0	3	1	1
5	MV-MID	torque adjustment from middle range to end- range	CODE 5	85	85	100	100
6	MV-END	MAX Power adjustment	CODE 6	40	40	85	85
7	BRAKE	Boost Adjustment	CODE 7	30	60	70	70
8	MV-HLD	torque adjustment in mid-range	CODE 8	Only with Setting Gear	2	2	2
9	MV-FRQ	Brake Adjustment	CODE 9		80	80	80
10	MAX-PW	drive frequency adjustment (torque adjustment between mid and end range)	CODE 10		100	100	100